



CUSTOM DOOR & MIRROR INC.

148/150 Milbar Boulevard. Farmingdale, N.Y. 11735
Tel: (631) 414 7725 . Fax: (631) 414 7729

How to...

FLOOR AND FLOOR PLATE OPTIONS

FLOOR PLATE WITH SADDLE —————→ **HARDWOOD FLOORS**

FLOOR PLATE ONLY (NO SADDLE) —————→ **HARDWOOD FLOORS OR TILE**

JAMB BRACKET ONLY (NO SADDLE) —→ **HARDWOOD FLOORS OR TILE**

FLOOR PLATE WITH SADDLE

Hardwood Floor

The saddle requires at least two 8d finishing nails, for longer saddles nails should be started at 6"-9" from the jamb and be spaced approximately 15"-18" apart for the length of the opening saddle. We recommend marking your holes and pre-drilling with 1/16" bit before nailing.

FLOOR PLATE DIRECTLY ON YOUR FLOOR

Hardwood Floor

When installing on hardwood floors we recommend marking your holes and predrilling with 1/16" bit and securing with 8D finish nails.

Tile

To install on tile you need an ¼" concrete bit securing with the two #8 screws and the two 8-10 plastic screw anchors. (This is much simpler then you might think). It makes for a very clean sharp look.

JAMB BRACKET ON YOUR FLOOR

Jamb bracket can be used for all three floor types. We also recommend the use of jamb bracket with floating floors. You will need to predrill two holes in your jamb (with 1/8" bit) and secure in place. However, some people prefer to pre-drill and add a floor screw but is not requires to put a screw into the floor as the weight of the panels will hold it in place.




CUSTOM DOOR & MIRROR INC.

148/150 Milbar Boulevard. Farmingdale, N.Y. 11735
Tel: (631) 414 7725 . Fax: (631) 414 7729


How to...

SADDLE OR NO SADDLE

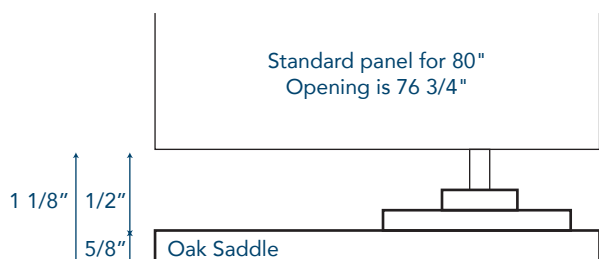


OAK SADDLE

With Oak Saddle door is made to have 1 1/8" gap split between top and bottom of the door.

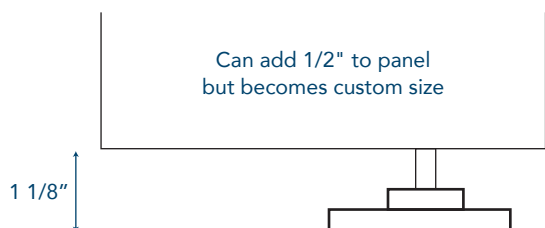

FLOOR PLATE ONLY

With Jamb Bracket stock door will have 1 3/8" gap, 1/4" at top and 1 1/8" at the bottom.

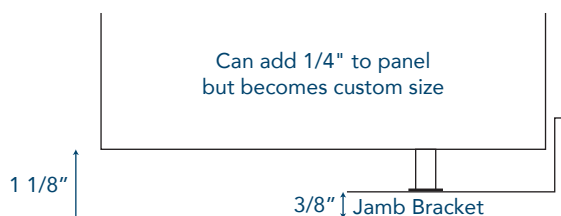

JAMB BRACKET

With Jamb Bracket stock door will have 1 3/8" gap, 1/4" at top and 1 1/8" at the bottom.